

Parts List

REF	PART #	DESCRIPTION
1	PLN03M	LOCK NUT M6-1
2	PW03M	FLAT WASHER 6MM
3	P0594003	RUBBER FOOT
4	PS26M	PHLP HD SCR M6-1 X 20
5	P0594005	LEG
6	PW01M	FLAT WASHER 8MM
7	PN03M	HEX NUT M8-1.25
8	PLW04M	LOCK WASHER 8MM
9	P0594009	TUBE
10	P0594010	HEX BOLT M8-1.25 X 200
11	P0594011	DISCHARGE CHUTE
12	P0594012	MOVABLE DOOR
13	PWN01M	WING NUT M6-1
14	PWF06M	FENDER WASHER 6MM
16	P0594016	HITCH PIN 2MM
17	PWF08M	FENDER WASHER 8MM
18	P0594018	SCREEN
19	P0594019	SPACER 1
20	P0594020	SPACER 2
21	P0594021	SPACER 3
22	P0594022	HAMMER
23	P0594023	SPACER 4
24	PRP39M	ROLL PIN 4 X 20
25	P0594025	HAMMER AXLE
26	P0594026	WHEEL AXLE
27	P0594027	BOX FRAME SIDE LEFT
28	P0594028	WHEEL SUPPORT
29	P0594029	WHEEL
30	P0594030	SPACER
31	P0594031	COVER
32	P0594032	RING1
33	P0594033	RING2
34	P0594034	RUBBER GRID
35	P0594035	CHIPPER CHUTE
36	P0594036	BLADE COVER PLATE
37	P0594037	BEARING COVER
38	P0594038	WIRE CIRCLIP 25MM
39	P0594039	BEARING WASHER(RIGHT) 25MM
40	P0594040	BEARING SEAT
41	P0594041	BALL BEARING 4205
42	P0594042	SPACER (RIGHT)
43	PB20M	HEX BOLT M8-1.25 X 35
44	PFH21M	FLAT HD SCR M8-1.25 X 25
45	P0594045	BLADE
46	P0594046	IMPELLER
47	P0594047	BELT KEY
48	P0594048	ENGINE PLATE
49	P0594049	HOOK

REF	PART #	DESCRIPTION
50	PB09M	HEX BOLT M8-1.25 X 20
51	P0594051	REAR BOARD
52	P0594052	HOPPER GASKET
53	P0594053	HOPPER
54	P0594054	TOOL BOX
55	P0594055	HANDLES
57	PS42M	PHLP HD SCR M8-1.25 x 35
60	P0594060	CLUTCH
61	PVA41	V-BELT A41
62V2	P0594062V2	MUFFLER GUARD V2.07.11
63	P0594063	RUBBER GROMMET
64	P0594064	PULLEY COVER
65	P0594065	SUPPORT PLATE
66	PS11M	PHLP HD SCR M6-1 X 16
67	P0594067	BELT COVER BRACKET
68	PW03M	FLAT WASHER 6MM
69	P0594069	SUPPORT PLATE
70	P0594070	BELT COVER SUPPORT
71	P0594071	WIRE CIRCLIP 25MM
72	P0594072	SPACER
73	P0594073	PULLEY
74	P0594074	BEARING WASHER (LEFT) 25MM
75	P0594075	SPACER
76	P0594076	BOX FRAME SIDE RIGHT
77	P0594010	HEX BOLT M8-1.25 X 200
78	P0594078	COTTER PIN 3.2 X 20
79	P0594079	HOPPER GUARD
80	P0594080	BLADE COVER WARNING
81	P0594081	DISCHARGE CHUTE WARNING
82	P0594082	PULLEY WARNING
83	P0594083	OIL WARNING
84	PLABEL-12	READ MANUAL LABEL 2" X 3-5/16"
85	PLABEL-15	EAR PROTECTION LABEL 2" X 3-5/16"H
86	P0594086	G0594 ID LABEL
87	PLABEL-11	SAFETY GLASSES LABEL 2" X 3-5/16"
88	PSDS2	#2 STANDARD SCREWDRIVER
89	PWR1315	WRENCH 13 X 15
90	PWR1214	WRENCH 12 X 14
91	P0594091	SOCKET HANDLE
92	P0594092	SPARK PLUG SOCKET 5/8"
93	P0594093	GOGGLES
94	P0594094	FUNNEL
95	P0594095	EAR PROTECTION
96	P0594096	GLOVES
97	P0594097	HOPPER COVER
98	P0594098	FUNNEL COVER
99	P0594099	DISCHARGE BAG
100	PLN04M	LOCK NUT M8-1.25

WARNING

Safety labels warn about machine hazards and ways to prevent injury. The owner of this machine **MUST** maintain the original location and readability of the labels on the machine. If any label is removed or becomes unreadable, **REPLACE** that label before using the machine again. Contact Grizzly at (800) 523-4777 or www.grizzly.com to order new labels.

